

# INSTALL INSTRUCTIONS C-VS-1800-ESC-1

## 2008 FORD ESCAPE

### VEHICLE SPECIFIC CONSOLE

#### TOOLS REQUIRED:




- Phillips Screw driver
- T-20 Torx Bit
- Ratchet Wrench
- 7mm, 10mm sockets

#### HARDWARE:



QTY:	DESCRIPTION:	PART #:
18	8 x 1/4" Flat Head Phillips SMS	GSM33187
2	3/4" Plugs	GSM 20016
1	Torx screws	C-HK-1
2	Bracket, Spacer, Front Gear Box Console	CM002140
1	Bracket, Cons, Fuse Cover	CM002142
1	Bracket, Cover, Shift Gear Box	CM002150
1	Panel, DS, Front Console, Shift Gear Box	CM002151
1	Panel, PS, Front Console, Shift Gear Box	CM002152

#### LINE DRAWING:

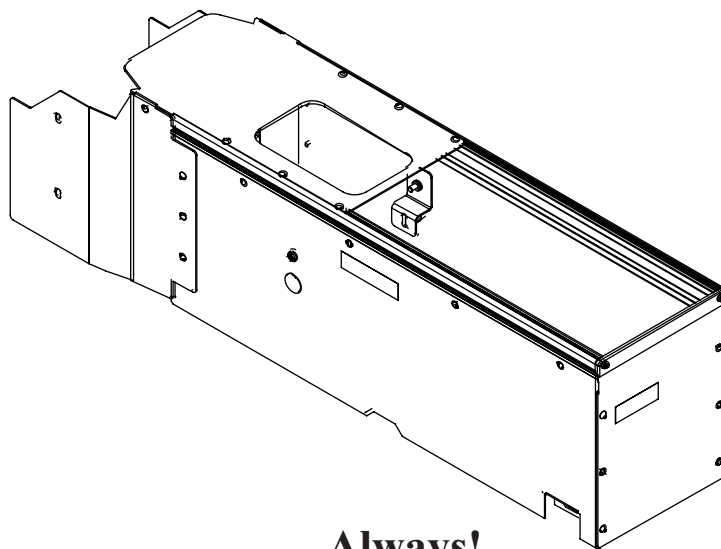

**Always!**



- Read all instructions before installing any Havis-Shields Equipment Corp products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit
- For product support: visit the Install Instructions Section of our website at <http://havis.com/Installation/Installation.html>, email [technicalsupport@havis.com](mailto:technicalsupport@havis.com) or call 1-800-524-9900.






Carefully remove shift lever trim bezel (unsnap)



Carefully remove top of OEM console (unsnap)

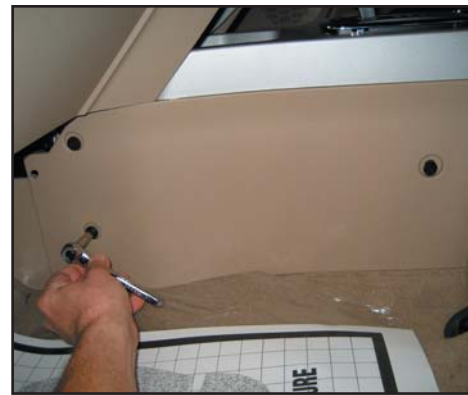

Remove screw front lower sides (7mm socket)  
\*\*SAVE HARDWARE\*\*




Remove rear lower side screws (10mm socket)  
\*\*SAVE HARDWARE\*\*




Remove front upper screws (7mm socket)



Unplug 12volt socket power

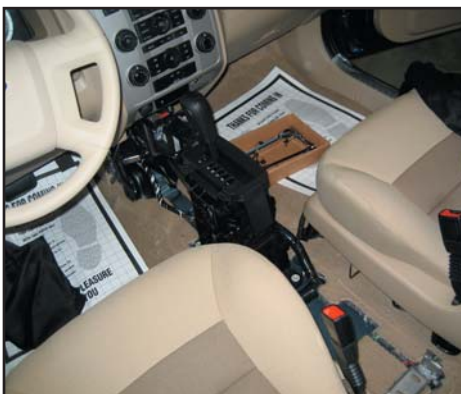

Remove OEM console

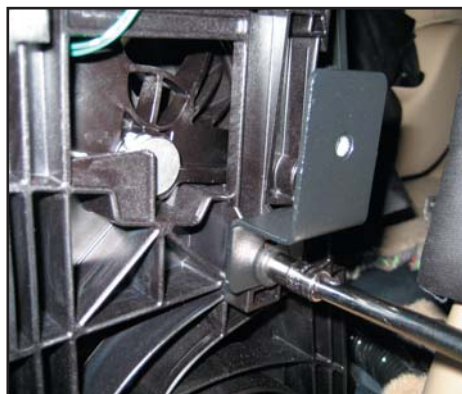

Attach new "Z" brackets (one each side) with previously removed OEM hardware. (7mm socket)



New "Z" brackets installed  
\*\*DO NOT FULLY TIGHTEN YET\*\*



Place new console housing  
between seats



Attach to "Z" brackets with 1/4 x  
3/4 Phillips head bolts



Tighten screws that attaches "Z"  
bracket to OEM mount



Attach rear lower console to OEM  
floor mount with OEM hardware  
(10mm socket)



Move shift lever to rear position



Place front console cover plate  
around shift lever



Make sure plate is evenly spaced to  
allow trim bezel remounting  
**\*\*DO NOT ATTACH YET\*\***



Passenger side filler panel



Attach to console with #8 x 1/4"  
flat head sheet metal screws



Attach filler panel to OEM mounts with OEM hardware (7mm socket)



Driver side filler panel




Attach same as passenger side panel



Make sure top plate is evenly spaced to allow trim bezel to snap back in.



Attach plate with #8 x 1/4" flat head sheet metal screws

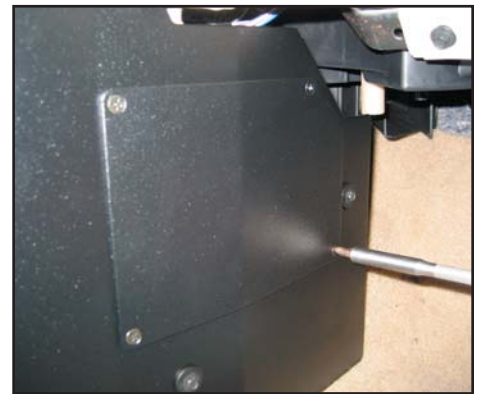

Attach fuse panel cover (#8 x 1/4" SMS)



Insert 3/4" plugs in "Z" bracket holes



Reattach trim bezel



1/4" nuts for side mount accessories (i.e. TCB-7, Mic-clip brackets, etc)



Finish wiring and complete installation